

Product Parts

- 1- Corrugated cut out
- 1- Removeable easel back

Cut out Set-Up Cutouts which are 2 & 3 foot tall will come unfolded with easel attached, no assembly required.

Step 1

Remove the custom cut out and easel back from its protective plastic bag.

Step 2

Unfold cut out and lay on floor or table. To install the easel back engage the both velcro strips together.

Step 3

Stand up with easel installed and place in desired location.



Storage

Step 1

Disengage velcro by separating the easel back from the cut out.

Step 2

Fold cut out and easel back up for transportation.

Step 3

Place in supplied protective plastic bag. **ITEM MUST BE STORED FLAT IN A COOL, DRY PLACE.**

Care

We do not recommend storing your cutout folded for extended periods of time as this can damage your project in the scored area. Fold your item for transportation only. Then store flat and unfolded (slid under a desk or bed etc.)

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.

