

General Setup Instructions

Waveline Tension Fabric



For additional information please feel free to call us at 1.800.723.2050 or visit our website at AffordableDisplays.com.

TOOLS

No tools required

PARTS

(A) 4 long straight poles



(B) 1 slim straight support pole




(C) 4 corner poles:
(2 curved, 2 straight)



(D) 2 single edge feet




(E) 1 fabric graphic

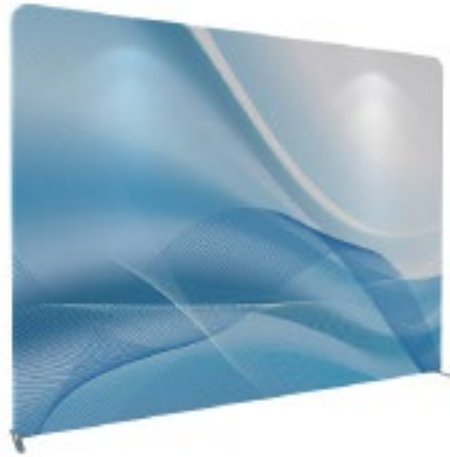


STEP 01

Assemble the five long straight poles (A, B).

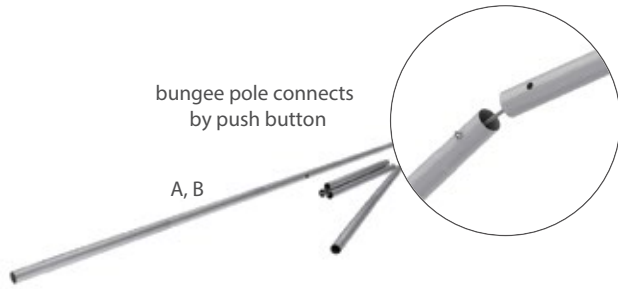


STEP 02

Connect corner poles (C) to straight poles (A) with matching shape codes. Connects by push button.

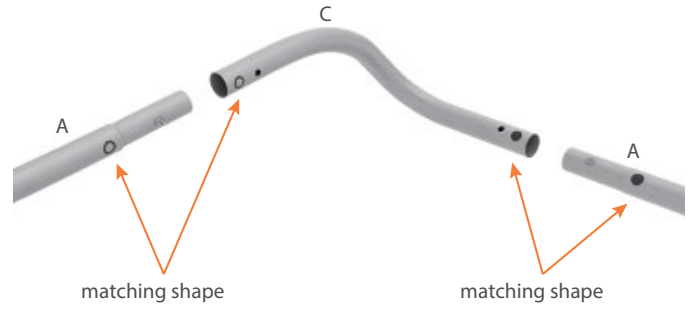


STEP 03

Repeat step 2 for the other three corners.

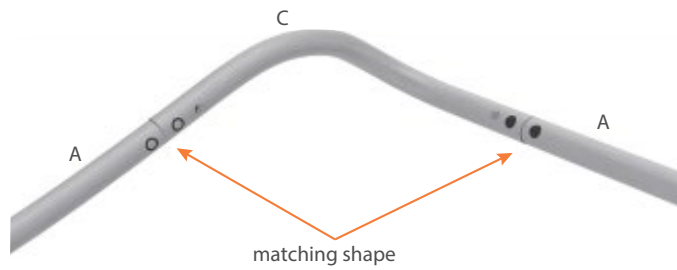


STEP 04

Frame layout.

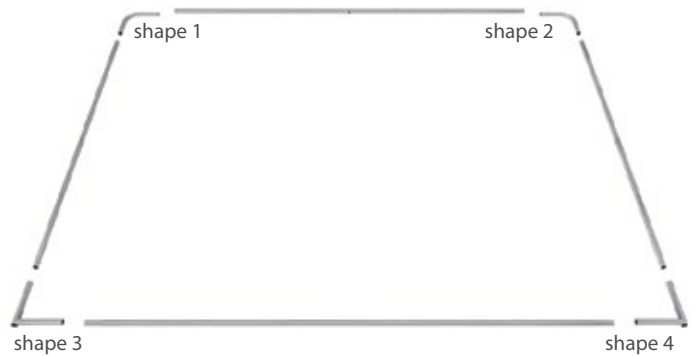


STEP 05

Insert straight support pole (B) in center of long straight poles (A).

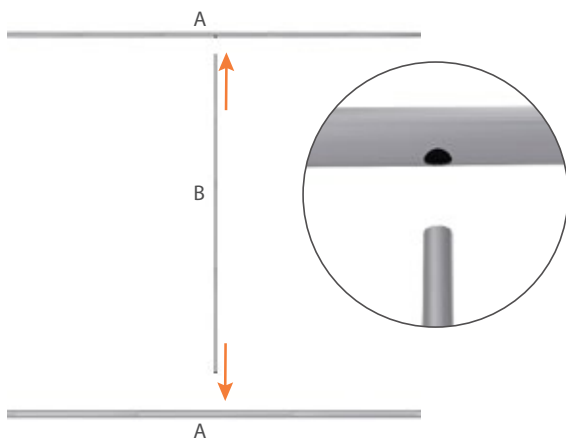

STEP 06

Connect feet (D) by pressing and pushing.

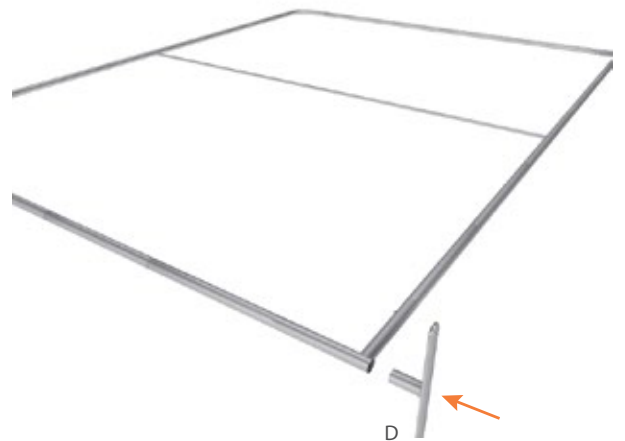


STEP 07

Unzip fabric graphic (E) and lay image face down. Slide fabric onto frame like a pillow case.




STEP 08

Zip the edge of graphic beyond the center support pole as shown. This will hold the center support pole in place. Zip the remaining side and bottom to meet at the corner.

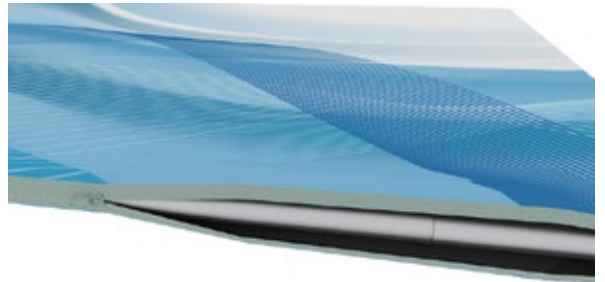

STEP 09 (OPTIONAL)

Position lights as desired and tighten knob to hold in place. **WARNING!** Over tightening may cause damage to fabric image on frame.

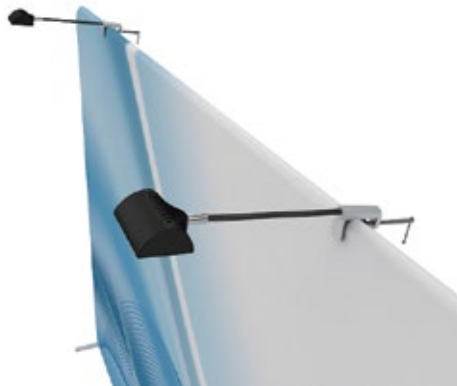

STEP 10

Complete.



For additional information please
feel free to call us at 1.800.723.2050
or visit our website at AffordableDisplays.com.