

## **Display Set-Up**

#### Step 1

Remove all parts from the case and place on a clean flat surface.

All poles of the Hardware Unit (1) are secured to the back receptacle and to each other with shock cord.

Notch in kickstand lines up with rib

on back hub to lock kick-

### Step 3

Attach the Fabric Graphic (3) by securing the pockets on the backside onto each corner.

# Step 2

Secure Kickstand to back hub. (make sure notch fits over rib-to lock into place)

Slide all the poles into the back receptacle, then secure the rest of the poles to each other.

## Storage & Care

Place all product parts into Soft Case and store in a cool dry location.

Fabric Graphic (3) Care: Machine Wash Cold Gentle Cycle Air Dry Only. Do NOT Dry Clean. Do NOT Iron.





Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.