
# Simpo Sign II

## 210091, 210092, 210090, 271049, 271050

Scan to view Product Instructional Video or visit: http://www.creativedisplaysite.com/SimpoSign2.html



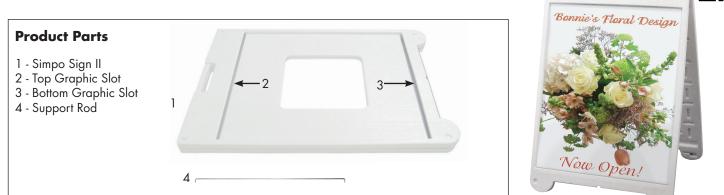

## Sign Install & Display Setup

#### Step 1

Separate the front and back of the Simpo Sign II (1) to create an a-frame that can stand on its own.



#### Step 2

Locate Support Rod (6) behind the feet, pull to remove it. Place each hooked end of the Support Rod (6) into the holes in the bottom center side of the Simpo Sign II (1).



0	
-	

•	0	
/		

## Step 3

Slide your graphic into the Top Graphic Slot (2). Slide the bottom end of your graphic into the Bottom Graphic Slot (3) until it rests on the ledge. Repeat to install a graphic on the other side.



## Storage

Store in a cool dry location.

#### Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.