Modulum Podium Instructions

PODIUM COMPONENTS 2- end cap panels 2- center panels Magnetic channel bars 2-pc podium top Podium top installation bars Aluminum frame collapsed



- 1. Remove all components from shipping case and place on floor.
- 2. Expand the aluminum framing until the magnetic frame bars lock frame into place. Make sure panel pins are right side up.
- 3. Install the individual magnetic channel bars onto frame. See page 2 for detailed instructions.
- 4. Magnetically attached each end cap panel (panels with notches in top corners) first by hooking over top panel pins then engaging both magnetic strips together.
- 5. Place the 3 podium top installation bars (velcro side up) inside of each frame block. Place each section of the 2-piece podium top on by engaging and securing the velcro.
- 6. Magnetically attached the center panels first by engaging both magnetic strips together. Try not to move podium once all set up.






To Reposition -

Roll graphic back up to starting point, adjust, then roll back out. NOTE: <u>DO NOT KINK OR USE ROUGH TREATMENT</u>




Modulum Podium Magnetic Bar Instructions

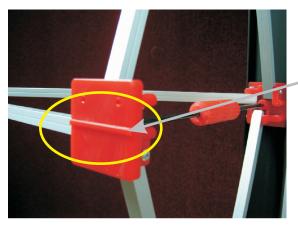

When mounting plastic magnetic channel bars do not cover high point on frame block. If covered frame will not square up properly and panels will not sit evenly on frame.

Note: Red block shown but applies to all blocks on frame red and black.

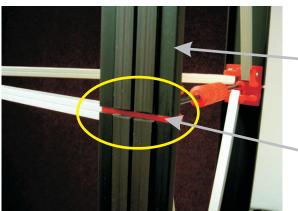

Plastic magnetic channel bars

Correct placement of channel bars mounted to block. High point on block must not be covered with channel bar.



