

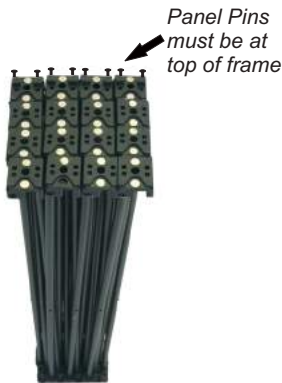


1

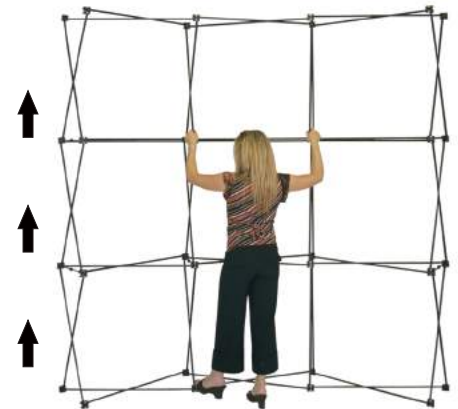


The top of the frame has pins that the panels hang from. Be sure they are located at the top not the bottom of frame.

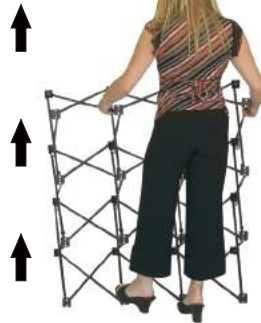


Expand frame upward until MAGNETIC LOCKING BARS make contact, this will hold the frame in place to install the magnetic channel bars in step 2.

2

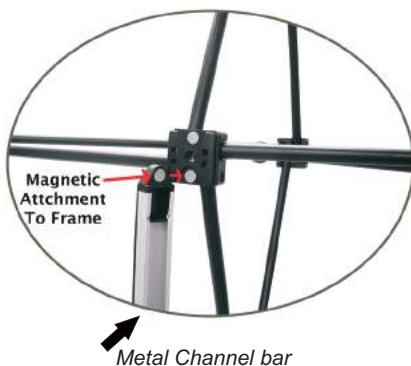

Hint for Installing channel bars:
Start at bottom and work your way across and up the frame.

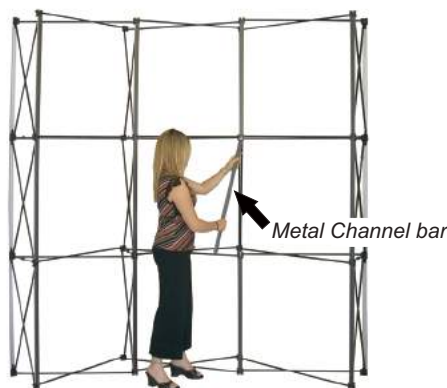

Install magnetic channel bars to the frame. The magnetic to magnetic connection will facilitate the installation. Start at the bottom and work your way across and up to the top of the frame. The ends have 3 channel bars in front and 3 in back.

Components List

Aluminum pop up frame

Magnetic channel bars - Qty. 15 for 6' Model
Qty. 18 for 8' Model
Qty. 21 for 10' Model

Center pop up panels - Qty. 2 for 6' Model
Qty. 3 for 8' Model
Qty. 4 for 10' Model

End cap pop up panels - Qty. 2 for every model

3



Install panels using top hooks on the backside of panels. Magnetic will adhere panel to channel bars.



DISMANTLE:

To release the Magnetic Locking Bars place one hand on each side of locking bar and in a quick motion pull apart. Be sure **ALL** Magnetic Bars are released before attempting to lower frame.