

# Double Reception Counter

## LN-CU-08

Dress up your space with sophisticated and functional counters. Counter tops are available in four thermoform finishes – silver, black, mahogany, and natural. Printed graphic panels create the base of the counter. Comes standard with a locking cabinet door. Custom counter top colors are available.



## features and benefits:

- Custom appearance
- Easy to assemble
- Table top available in four finishes
- Locking door
- Internal shelf
- Installation tool included
- Aluminum frame construction
- Custom top and graphic colors available
- Lifetime limited hardware warranty against manufacturer defects

## dimensions:

Hardware	additional information:
Assembled Unit: 66.39" w x 40.2" h x 27.9" d 1686mm(w) x 1021mm(h) x 710mm(d)	Interior Cabinet Dimensions: 22" w x 39" h x 12" d 559mm(w) x 991mm(h) x 305mm(d)
Approximate weight: 84 lbs / 39 kgs	Tabletop Dimensions: 66.39" w x 1.2" h x 27.9" d 1686mm(w) x 31mm(h) x 710mm(d)
Shipping	Graphic material: UV - 6mm Sintra
Packing case(s): 1 OCH2	Counter holds max 100 lbs / 23 kgs
Shipping dimensions: 52" l x 29" h x 15" d 1321mm(l) x 737mm(h) x 381mm(d)	Shelves hold max 10 lbs / 6 kgs each
Approximate total shipping weight (includes case & graphics): 117 lbs / 54 kgs	When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.
Graphic	Tabletop Colors:  silver black mahogany natural
Refer to related graphic template for more information.	
Visit <a href="http://exhibitors-handbook.com/graphic-templates">exhibitors-handbook.com/graphic-templates</a>	

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

# Included In Your Kit

Tools, Components, Connectors, & Extrusions



5MM ALLEN-T x1



PH-280-S-S x8




V-CAB-01-DR x2




V-CAB-01-FR x2



SS1-S x8

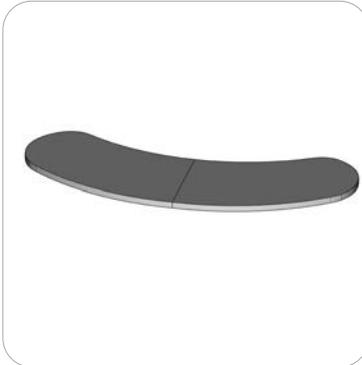


V-CU-CT-02 x1

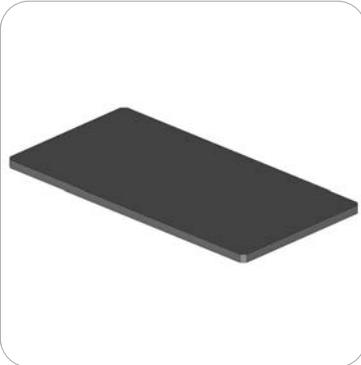


V-CU-CAB-01-S x2

Graphics

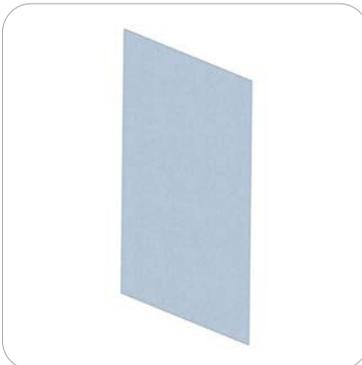

V-CAB-01-GF-FR-01 x2

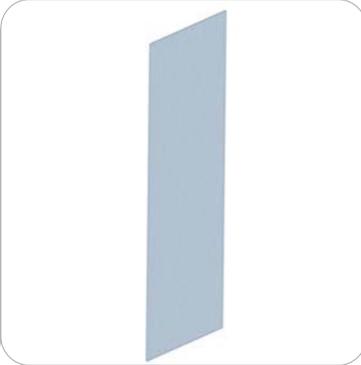


V-CAB-01-GF-SD x4



V-CAB-01-GF-DR-01 x2


# Exploded View

LN-CU-08

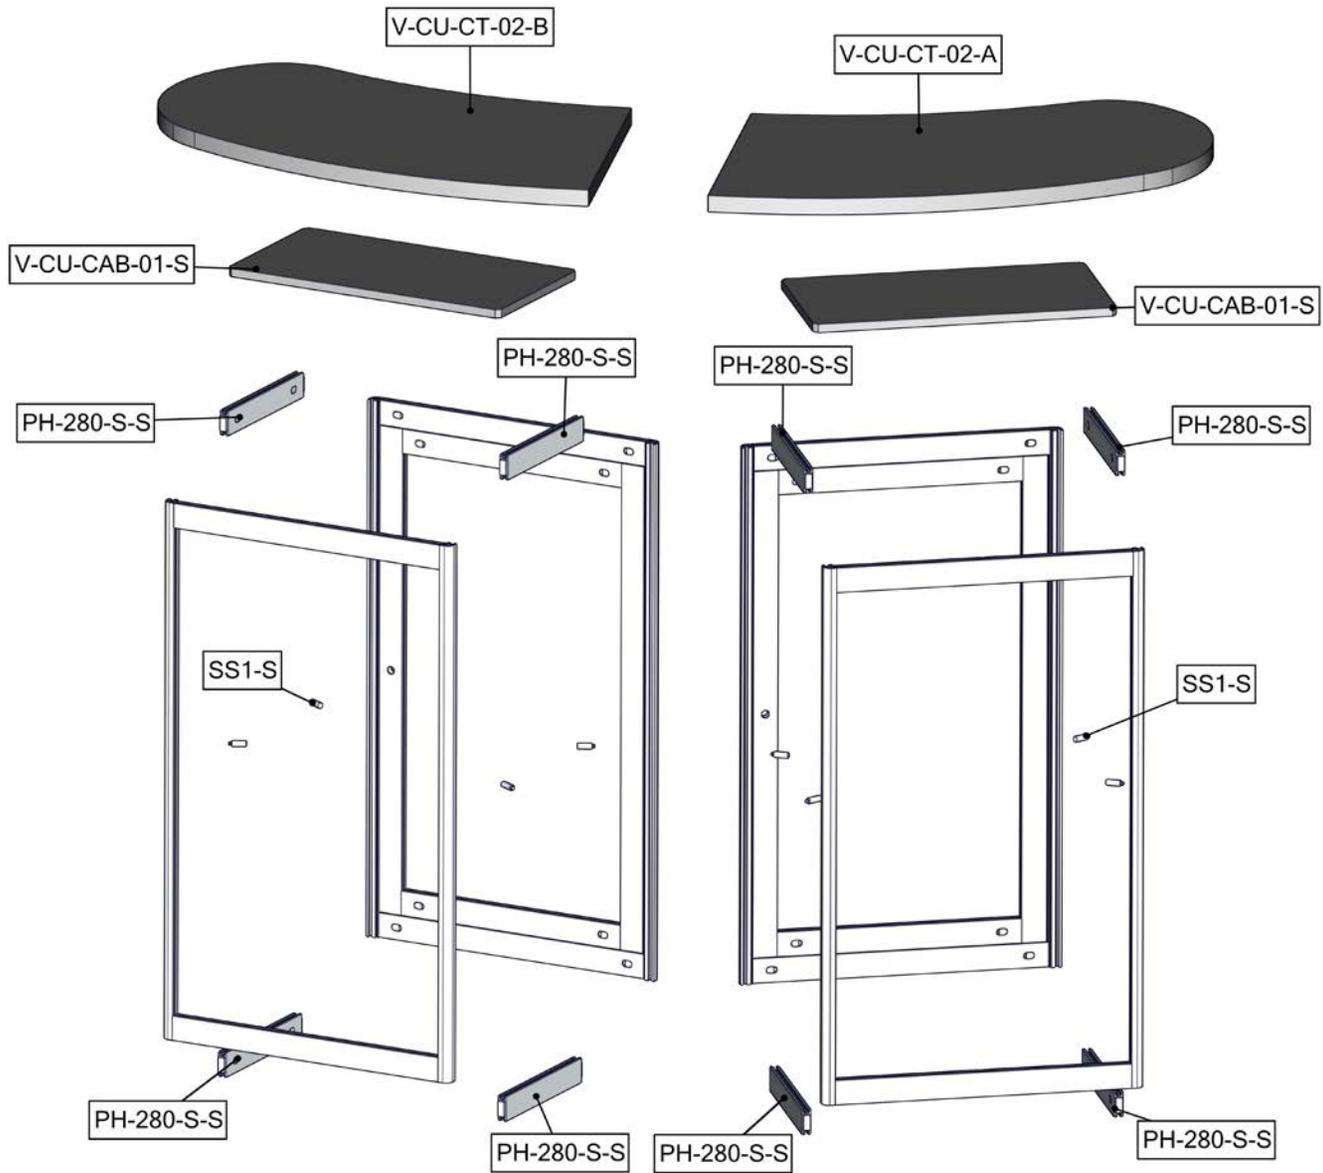

# Connection Methods

## Connection Method 1: P90R / PH-L

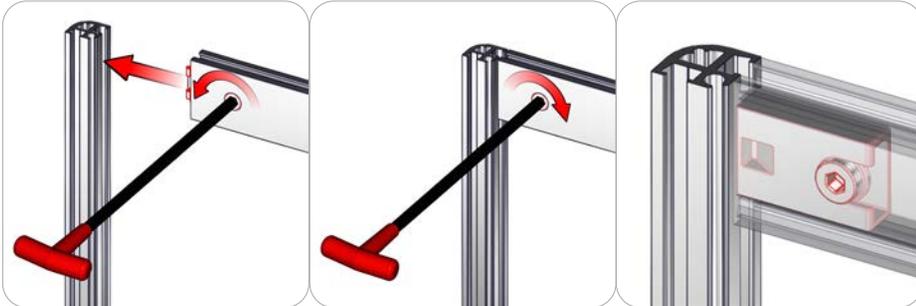


First, with the cam lock disengaged, place the cam lock teeth into the extrusion channel. Second, use the allen key tool to lock it in place. Make half turns clock-wise to engage the cam lock. Do not over tighten the lock buttons.

## Connection Method 2: ROTO LOCKS



First, with the provided hand tool, disengage the male ROTO LOCKS. Second, use the doll rods to help align the wood panels in place. Third, with the provided hand tool, engage the male ROTO LOCKS into the female receptors with snug 3/4 turns.

## Connection Method 3: SS1-1

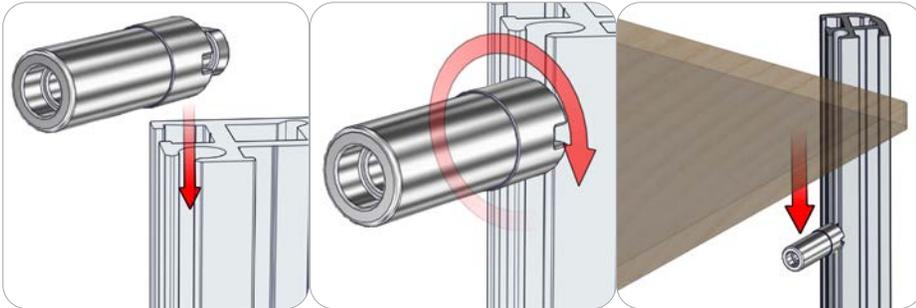

First, take the shelf support and loosen the set screw to about a 1/4 inch gap. Do not remove it. Second, slide the shelf support into the 3mm center channel. Turn the shelf support clock wise to lock it in place. Third, rest the shelf onto the shelf support. Loosen the shelf support to adjust and level.


# Kit Assembly

## Step by Step

### Step 1.

Locate your V-CAB-01-DR and V-CAB-01-FR assemblies. Both frames should have preinstalled graphics. V-CAB-01-DR should also have a locking door, test to ensure it is properly functioning.


Reference Connection Method 1 for more details.

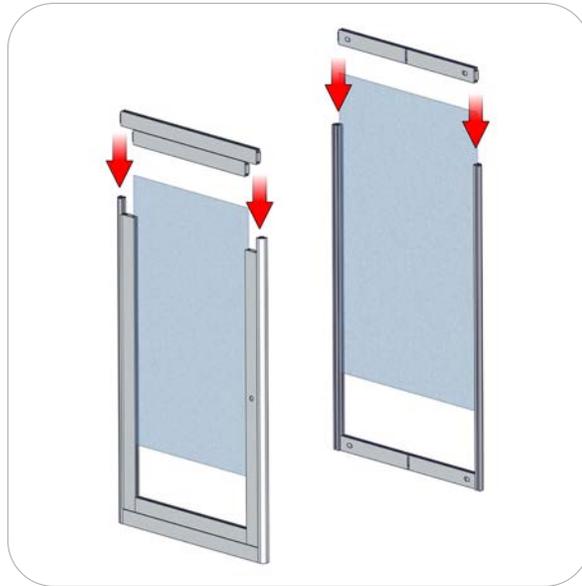

### Step 2.

Locate (2) PH-280-S-S extrusions. Lock into place so that the hex bolt heads face inward to the cabinet and the extrusion is flush with the V-CAB-01-DR and V-CAB-01-FR.


Reference Connection Method 1 for more details.

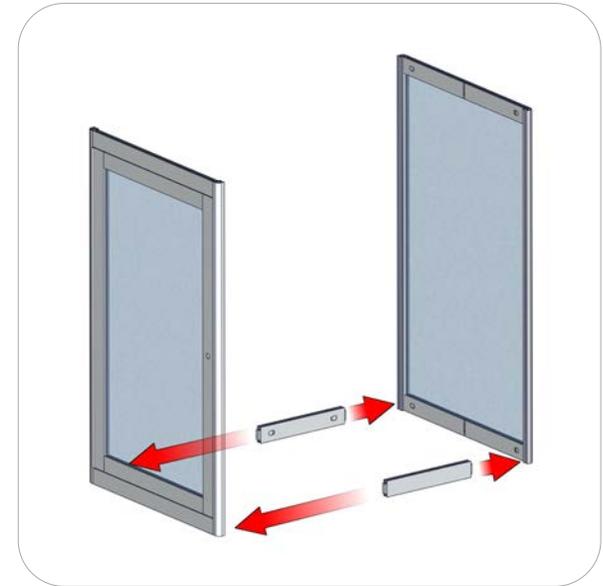

### Step 3.

Locate (2) PH-280-S-S extrusions and cabinet side graphic panels. Slide your graphic into the channels of V-CAB-01-FR and V-CAB-01-DR. Next, lock your PH-280-S-S extrusions above the graphics.

Reference Connection Method 1 for more details.


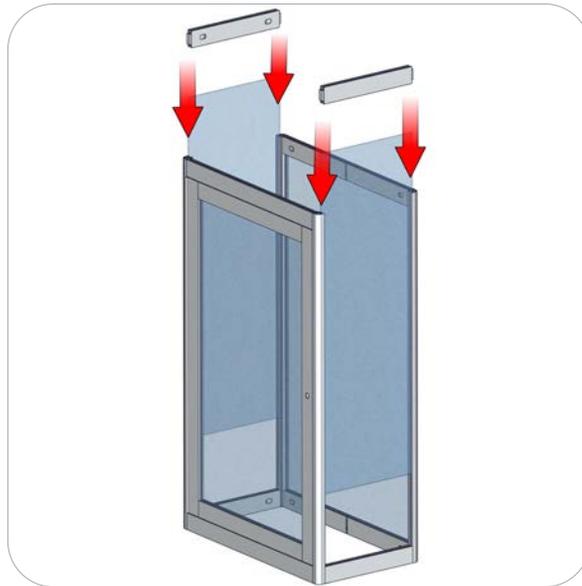


### Step 4.

Measure from the top of your cabinet to where you would like your internal shelf support. Lock the SS1 shelf supports into the channels of your V-CAB-01-FR and V-CAB-01-DR. Accurately measuring will ensure the internal shelf sits level.

Repeat steps 1-4 to make the second cabinet.

Reference Connection Method 3 for more details.

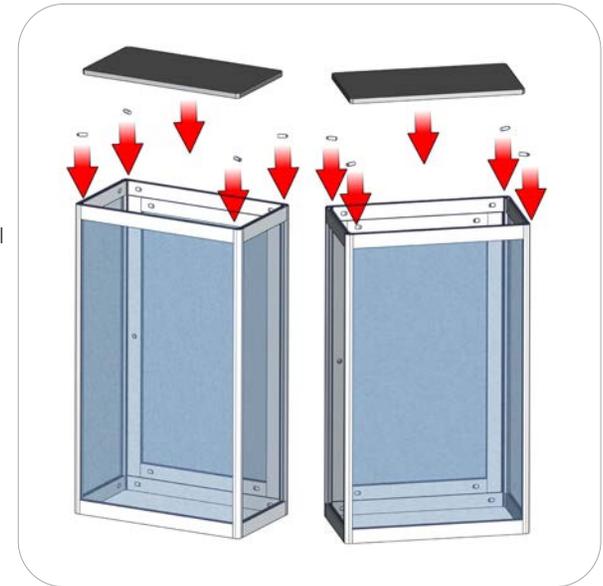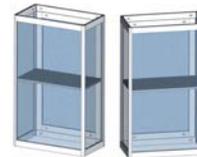

# Kit Assembly

## Step by Step

### Step 5.

Locate counter top V-CU-CT-02.  
Note the imprinted placement  
templates on the underside of  
your counter top. Set the counter  
top onto the assembled counters.  
Make sure the counter sets into  
the imprints on the underside of  
the counter top.

Reference Connection Method 2  
for more details.

