


Formulate 12' Four Sided Tower

COL-01

Mix and match the Formulate™ line of towers to add architecture and drama to any event or interior space. Rectangular-shaped towers come in 12ft, 10ft and 8ft heights and 3ft square at the top and bottom. They combine the latest developments in fabric printed technology with aluminum tube frames to add dimension, decor and sculpture to any event, stage set, tradeshow booth or interior space. Formulate towers accommodate internal LED lighting to create a glowing effect.

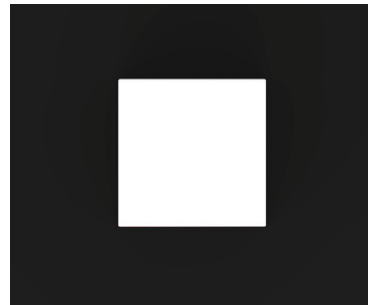

TOP VIEW

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- State-of-the-art 30mm aluminum tube frame with snap button assembly
- Easy to store and ship
- Quick to set up
- Kit includes: one frame, one dye-sublimated zipper pillowcase graphic, and one wheeled molded OCL storage case
- Lifetime hardware warranty against manufacturer defects

dimensions:


Hardware	Graphic
<p>Assembled unit: 36"l x 36"w x 144"h 915mm(l) x 915mm(w) x 3658mm(h)</p> <p>Approximate weight (includes graphic): 34.76 lbs / 15.76 kgs</p>	<p>Refer to related graphic template for more information.</p> <p>Visit: www.exhibitors-handbook.com/graphic-templates</p>
<p>Shipping</p> <p>Shipping dimensions: 1 OCL case: 19"l x 19"h x 56"d 483mm(l) x 483mm(h) x 1422mm(d)</p> <p>Approximate shipping weight (with case): 54.76 lbs / 24.84 kgs</p>	

additional information:

Graphic material:
dye-sublimated zipper pillowcase graphic

Parts Included


Part Label	Qty	Part Code
760MM X 30MM TUBE	x8	COL-T1
1130MM X 30MM TUBE	x8	COL-T2
30MM CURVED SPREADER	x8	COL-T4
1217MM X 30MM SWAGED TUBE WITH PART C	x4	COL-T5
TC-30-A ASSEMBLED AT 90°	x8	TC-30-A-90°
12' FOUR SIDED TOWER GRAPHIC	x1	COL-01-G

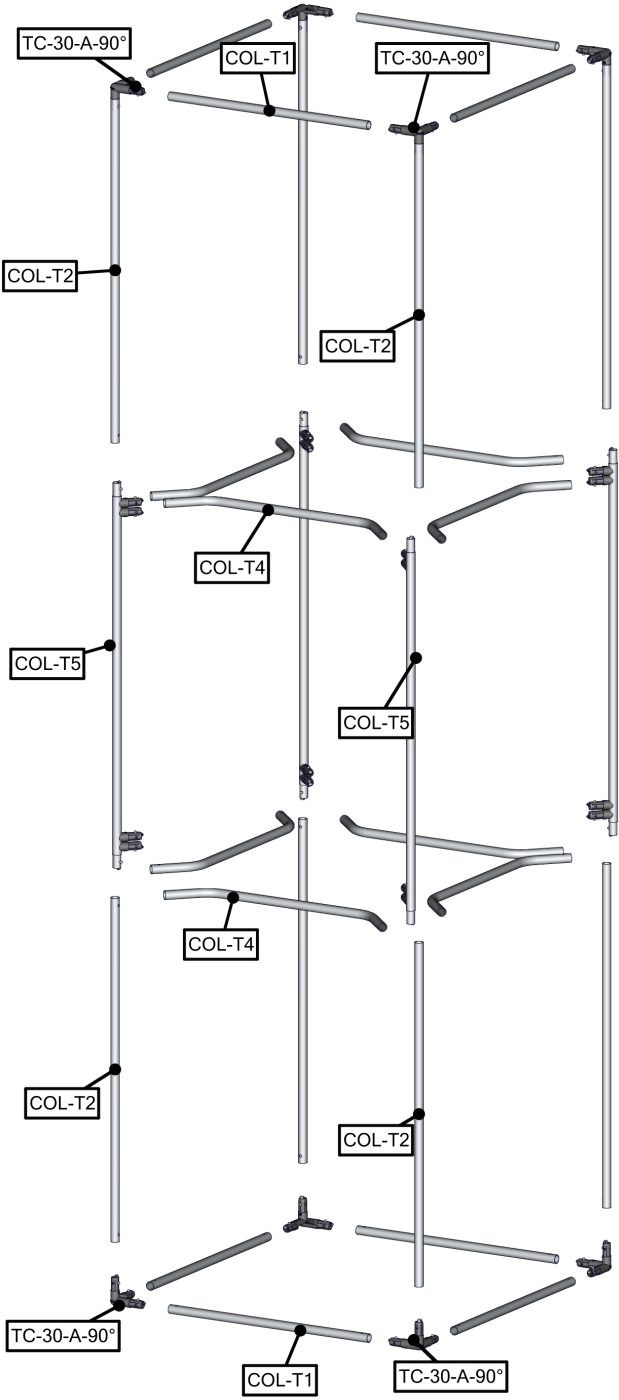


STEP 1: ASSEMBLE FRAME

TC-30-A-90°

SNAP ON
BUTTON

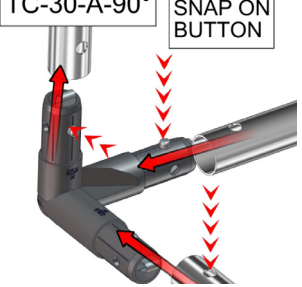


Connect bottom tubes (COL-T1) and side tubes (COL-T2) to TC-30-A-90°.




Repeat previous step until all four sides of bottom are assembled.

SNAP ON
BUTTON

COL-T5

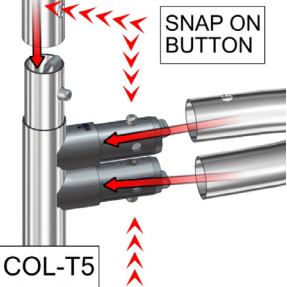

Connect curved spreader tubes (COL-T4) to side tubes (COL-T5).

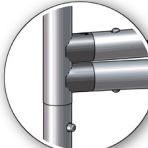


Continue connecting middle section of tube to bottom frame section.


STEP 2: ATTACH GRAPHIC

TC-30-A-90°


SNAP ON
BUTTON



Finishing connecting side tubes, then connect top of frame.

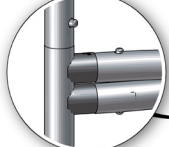


Finish frame assembly by connecting top corners and tubing. *Frame can be on side for assembly.

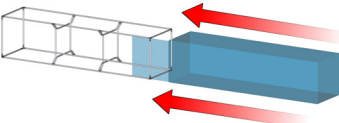

Lay tube frame on its side and pull graphic over frame.

ZIPPER

2-

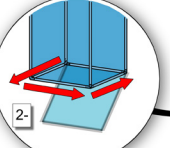

Zip close pillowcase graphic. Stand frame upright with zipper on bottom.